

# 6123 QUICK REFERENCE

**Set the Management Reset Code** (before the Master Code is changed for the first time):

Press \* \* # ( 1 2 3 4 5 6 ) # ( \_ \_ \_ \_ ) # ( \_ \_ \_ \_ ) ## 

*factory master code*

*MRC*

*MRC*

Note: clears all codes except the Time Delay Override Code

**Use the Management Reset Code**

Press \* 6 # ( \_ \_ \_ \_ ) # *(lock beeps once  for each time the MRC has been used)*

*MRC*

**Disabling Time Delay Override Capability** (before the Master Code is changed for the first time):

Press 8 3 \* ( 1 2 3 4 5 6 ) # 1 # 1 # 

*factory master code*

**Set a Time Delay Override Mode** (before the Master Code is changed for the first time):

Press 4 6 \* ( 1 2 3 4 5 6 ) # ( ⊕ ) # ( ⊕ ) # 

*factory master code*

⊕ = 1 for dual control TDO

⊕ = 2 for single control TDO

**Set or Change the Time Delay Override Code:**

Press 7 4 \* ( \_ \_ \_ \_ ) #  9 \* ( \_ \_ \_ \_ ) #  ( \_ \_ \_ \_ ) # 

*master code*

*TDO code*

*TDO code*

Note: must be set or changed in the "opening window" if the time delay length is more than zero

**Set or Change the Time Delay Length:**

Press 7 4 \* ( \_ \_ \_ \_ ) #  0 \* [delay length] #  [delay length] # 

*master code*

Note: must be set or changed in the "opening window" if the time delay length is more than zero

**Set or Change the Opening Window Length:**

Press 7 4 \* ( \_ \_ \_ \_ ) #  8 \* [window length] #  [window length] # 

*master code*

Note: must be set or changed in the "opening window" if the time delay length is more than zero

**Change the Master Code:**

Press 7 4 \* ( \_ \_ \_ \_ ) #  1 \* ( \_ \_ \_ \_ ) #  ( \_ \_ \_ \_ ) # 

*master code*

*new master code*

*new master code*

Note: to delete a code, simply do not enter a new code number—just push the # key

**Set, Change, Delete Supervisor and User Codes:**

Press 7 4 \* ( \_ \_ \_ \_ ) #  ⊕ \* ( \_ \_ \_ \_ ) #  ( \_ \_ \_ \_ ) # 

*master or supervisor code*

*new code*

*new code*

Note: to delete a code, simply do not enter a new code number—just push the # key

⊕ = 2 for Supervisor Code

⊕ = 3 through 7 for User Codes

### User Changes His Own Code:

Press 3 3 \* ( \_ \_ \_ \_ \_ ) #  ( \_ \_ \_ \_ \_ ) #  ( \_ \_ \_ \_ \_ ) #   
current user code                      new user code                      new user code

Note: users cannot delete their own codes

---

### Setting the Access Mode:

Press 3 2 \* ( \_ \_ \_ \_ \_ ) #  ( ⊕ ) #  ( ⊕ ) #   
master code

⊕ = 0 for Single User access

⊕ = 1 for Dual User access

⊕ = 2 for Supervisor/Subordinate access

Notes: <sup>1</sup>time delay override does not work in S/S mode

<sup>2</sup>a supervisor code must be set before changing to S/S mode

### Notes:

- The Supervisor code cannot set, change, or delete any codes in Dual Control mode.
- Time Delay Override (TDO) is not available in Supervisor/Subordinate mode.

---

---

### Recovering a 6123 with Unknown Programming:

You will need the Management Reset Code (MRC) for the lock.

1. Make sure there are good batteries in the keypad.
2. The lock cable must be plugged into the keypad.
3. DO NOT PRESS ANY BUTTONS FOR AT LEAST 15 MINUTES!
4. Press \* 6 # ( \_ \_ \_ \_ \_ ) # *(lock beeps once  for each time the MRC has been used)*  
MRC

5. Press 3 2 \* 1 2 3 4 5 6 #  0 #  0 # 

The lock should now be in Single User Mode, and the Master Code is 1 2 3 4 5 6 .

Repeat steps 1 through 5 if necessary.

---

To make sure a Time Delay Override Code is not retained in the lock:

Press 7 4 \* 1 2 3 4 5 6 #  9 \* #  # 